


LED PAR: 18*10 WARM WHITE

WATERPROOF

1. DIAGRAM

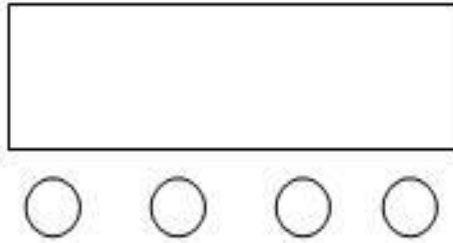

- A. Function
- B. Up
- C. Down
- D. Enter
- . Digital Display
- A B C D

HOW TO OPERATE?

Press button A, there will be eight different effects.
 The first two numeric stands for functions (refer to Diagram II)
 The last two numeric stands for DMX address, or speed.
 You can modify it with B or C button.
 D button is to confirm while you settled.

2. LED Display function cross-references, (D button is to confirm while you settled)

No.	Display	Function
1	D0001	3CHs Address Code, (001—512) Change the address code by B or C button
2	CC00	8Colors Changing, (01—99) Color change fast by B or C button
3	CP00	8colors gradual change, (01—99) Speed of gradual changing by B or C button
4	DE00	8 Colors mixed changing, (01—99) Select color. While change color, with B or C button
5	BEBE	Music activate
6	R255	Red color Changing, (000—255) Change the color by B or C button
7	G255	Green color Changing, (000—255) Change the color by B or C button
8	B255	Blue color Changing, (000—255) Change the color by B or C button
9	W255	White color changing, (000—255) Change the color bu B or C button

Channels	Function	Details
CH.1	Whole Dimmer	Total dimmer, dark →bright
CH.2	dimmer	WW dimmer, dark →bright
CH.3	strobe	Dimmer from slow →fast

4. Skill Specification

Voltage : AC110-240V/50-60Hz

Control mode: Auto run, sound activate, master /slave, DMX512.

DMX Channel: 3CH

Strobe : 1-8flash/second