


LED PAR RGB 3 IN 1 USER MANUAL

1. DIAGRAM :

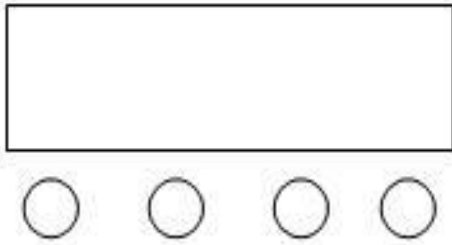

- A. Function
- B. Up
- C. Down
- D. Enter
- E. Digital Display

A B C D

HOW TO OPERATE?

Press button A, there will be eight different effects.

The first two numeric stands for functions (refer to Diagram II)

The last two numeric stands for DMX address, or speed.

You can modify it with B or C button..

D button is to confirm while you settled.

2. LED Display function cross-references. (D button is to confirm while you settled)

No.	Display	Function
1	D0001	8CHs Address Code, (001—512) Change the address code by B or C button
2	CC00	8Colors Changing, (01—99) Color change fast by B or C button
3	CP00	8colors gradual change, (01—99) Speed of gradual changing by B or C button
4	CL00	8 Colors mixed changing, (01—99) Select color. While change color, with B or C button
5	BEBE	Music activate
6	R001	Red color Changing, (000—255) Change the color by B or C button
7	G001	Green color Changing, (000—255) Change the color by B or C button
8	B001	Blue color Changing, (000—255) Change the color by B or C button

3. DMX512 Channels

Channels	Function	Details
CH.1	Dimmer	R、G、B、dimmer, linear, dark →bright
CH.2	Red	R dimmer, linear, dark →bright

CH.3	Green	G dimmer, linear, dark →bright
CH.4	Blue	B dimmer, linear, dark--bright
CH.5	Strobe	1-79 Macro, 80-255 strobe
CH.6	Sound activated	0-255
CH.7	Color selection	0-255

4. Skill Specification

Voltage: AC110-240V/50-60Hz

Control mode: Auto run, sound activate, master /slave, DMX512.

DMX Channel: 8CH

Dimmer: Linear dimmer

Strobe: 1-8flash/second

5. Feature:

Aluminum case, nice and wide application, less power consumption, high brightness, stable performance, long life. Easy to operate, friendly design, no shining or flicker while dimmer. Suitable for photograph, camera, and TV station as well.